


OPERATING INSTRUCTIONS

BATTERY OPERATED WATERING CONTROLLER GALCONIT E.Z.

MODEL 2010

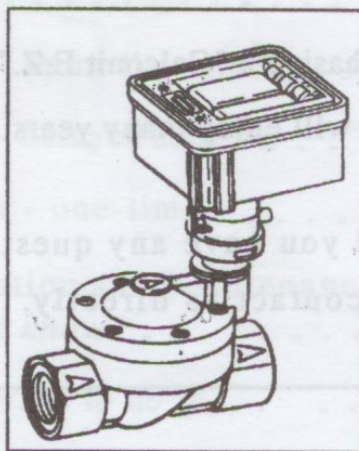

galcon 

IRRIGATION CONTROL EQUIPMENT

Before installing and using your Galconit E.Z. please read the instruction booklet.

OPERATING INSTRUCTIONS


BATTERY OPERATED

WATERING CONTROLLER

GALCONIT E.Z.

MODEL 2010

Thank you for purchasing a "Galconit E.Z." watering controller.
We are certain you will enjoy many years of trouble-free
watering.
However, should you have any questions, please ask
your retailer or contact us directly.

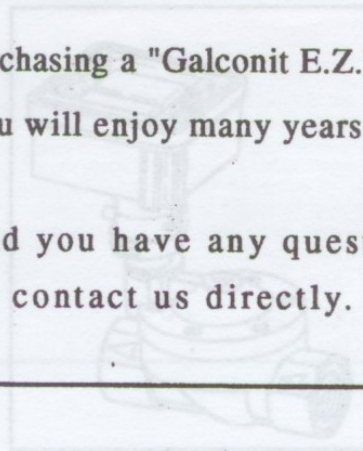

Galconit

1600 W. 10th St., Suite 100, Lincoln, NE 68502


Before installing and using your Galconit E.Z., please read the instruction booklet.

© 1990 Galconit, Inc.

Contents

Getting to know your controller	3
Assembling and installing the controller	4 + 5
Manual operation	5
Watering program - immediate start	6
Watering program - delayed start	7
Watering program - one-time	8
Important information and maintenance. <i>things you should know!</i>	9
Troubleshooting. <i>What to do if...</i>	10
Additional accessories and spare parts	11+12
Guarantee	14

GETTING TO KNOW YOUR CONTROLLER

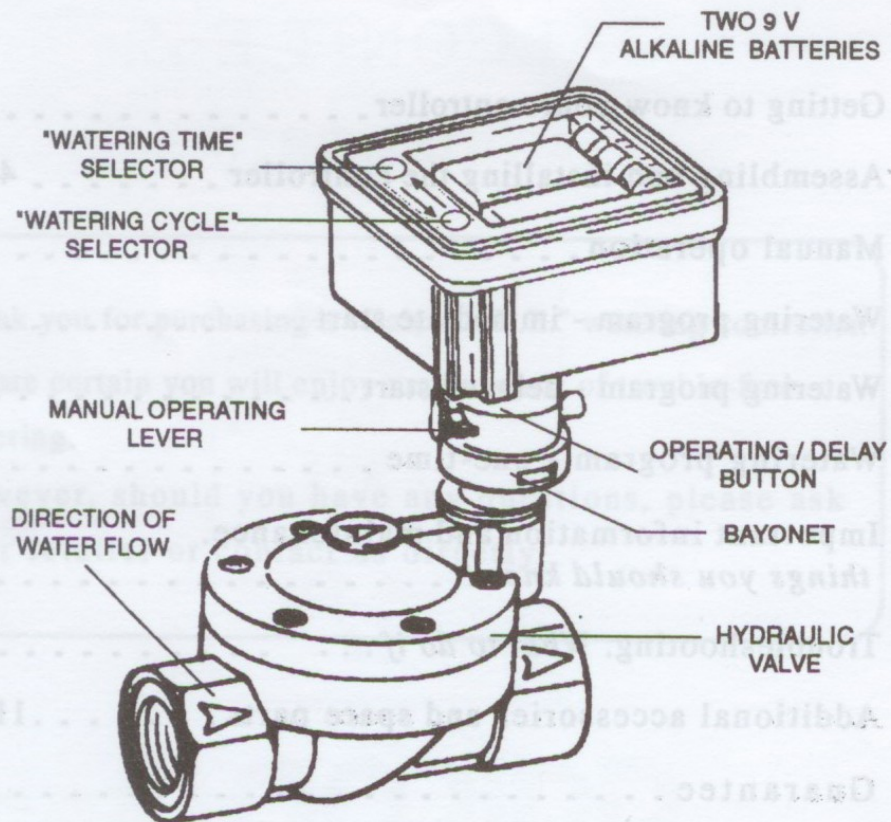

ASSEMBLING AND INSTALLING THE CONTROLLER

Installation

1. Turn off the main water supply.
2. Install the controller into the watering system making sure that the water flow from the mains is in the direction of the arrow on the valve housing.

***Never** use the controller unit as a handle for tightening the valve to the pipe.

Should the valve need tightening, **DO NOT** use the controller as a handle. A 1/4 turn anticlockwise releases the head.

Re-assemble after installation of valve unit.

When dismantling the unit, make sure not to lose the O-ring

***Should** your watering system not have a filter installed, you are recommended to fit one (like the Galcon filter - see page 11) between the controller and the water mains, to prevent the system from becoming blocked.


3. Turn the manual operating lever to the central position, "AUTO".



4. Turn on the main water supply.

5. Battery Installation

Insert the batteries correctly
(watch out for the + - polarity).
(Only use 9V alkaline batteries)

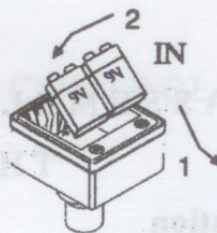

First insert the rear end of the battery and only then firmly push the front side of the battery into position.

Should you wish to install the controller inside a valve box, you must first seal the cover in accordance with the instructions (see page 9) Important information and maintenance.

Things you should know!

MANUAL OPERATION

TO open the valve manually - turn the lever to the left.



TO close the valve manually - turn the lever to the right.

Remember - To operate the watering controller automatically, the lever must always be in the middle (AUTO) position.


Manual operation, to OPEN, or CLOSE, may also be used during the Automatic program.

WATERING PROGRAM - IMMEDIATE START

(Example: 30 minutes of watering every 3 days).


1. Make sure that the "manual operation lever" is in the middle (AUTO) position and that the batteries are removed.
2. Point the "watering time" selector to the required setting (e.g. 30 min - position 4)

Position	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Watering Time	5	10	15	30	45	1	1.5	2	3	4	5	6	8	10	12
	minutes					hours									

 

3. Point the "watering cycle" selector to the required setting (e.g. for once every 3 days - position 8)

Position	O	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Watering Cycle	45	90	3	6	12	1	2	3	4	5	6	7	10	14		
	minutes		hours			days										

 

4. Insert the batteries correctly (see instructions page 5).

Wait approx. 10 seconds after inserting the batteries before continuing onto step 5.

5. Press the "operating button" beneath the controller *once* to start watering. (you will hear a "click").

* From now on the valve will open automatically in accordance with the program, for 30 minutes every 3 days at the same time.

N.B. - The "watering time" length can be changed even after running the program, by changing the "watering time" selector according to the table.


- To re-program, remove the batteries, wait 20 seconds and start again from step 1, according to the program required.

WATERING PROGRAM - DELAYED START

(Example: 2 hours of watering, once every 7 days, starting with a 6 hour delay).


1. Make sure that the "manual operation lever" is in the middle (AUTO) position and that the batteries are removed.
2. Point the "watering time" selector to the required setting (e.g. 2 hours, position 8)

Position	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Watering Time	5	10	15	30	45	1	1.5	2	3	4	5	6	8	10	12
	minutes					hours									

 


3. Insert the batteries correctly (see instructions - page 5).
4. Set the "watering cycle" selector to the "delay position" (O).

Position	O	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Watering Cycle	delay	45	90	3	6	12	1	2	3	4	5	6	7	10	14	once
		minutes		hours			days									

 

5. Push operating button (beneath unit) HOLD, and release after hearing the number of clicks representing the number of hours DELAY required.
(6 clicks = 6 hour delay)
(If the number of hours selected is an odd number, an additional click will be heard after a few seconds, this will ensure that the valve will be turned off)
6. Turn the "watering cycle" selector to the required setting (e.g. for once every 7 days- position "C").

Position	O	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Watering Cycle	delay	45	90	3	6	12	1	2	3	4	5	6	7	10	14	once
		minutes		hours			days									

 

* In six hours time, the controller will start watering for a period of 2 hours, regularly once every 7 days.

N.B.- The "watering time" length can be changed even after running the program, by changing the "watering time" selector according to the table.


- To re-program, the batteries should be removed, wait 20 seconds and start again from step 1, according to the program required.

WATERING PROGRAM - ONE-TIME OPERATION

(Example: 30 minutes of watering, once only, starting with a 10 hour delay).


1. Make sure that the "manual operation lever" is in the middle (AUTO) position and that the batteries are removed.
2. Point the "watering time" selector to the required setting (e.g. 30 minutes position 4).

Position	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Watering Time	5	10	15	30	45	1	1.5	2	3	4	5	6	8	10	12
	minutes					hours									

 

3. Insert the batteries correctly (see instructions - page 5).
4. Set the "watering cycle" selector to the "delay position" (O).

Position	O	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Watering Cycle	delay	45	90	3	6	12	1	2	3	4	5	6	7	10	14	once
		minutes		hours			days									

 


5. Push operating button (beneath unit) HOLD, and release after hearing the number of clicks representing the number of hours DELAY required. (10 hours = 10 clicks)

(If the number of hours selected is an odd number, an additional click will be heard after a few seconds, this will ensure that the valve will be turned off)

6. Turn the "watering cycle" selector to the "ONCE" position (F).

Position	O	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Watering Cycle	delay	45	90	3	6	12	1	2	3	4	5	6	7	10	14	once
		minutes		hours			days									

 

* In 10 hours time, the controller will start watering for a period of 30 minutes *one-time* only.

N.B.- To re-program, the batteries should be removed, wait 20 seconds and start again from step 1, according to the program required.

IMPORTANT INFORMATION AND MAINTENANCE *Things you should know!*

1. Installation in valve boxes

Should the controller be installed in a valve box, the battery compartment must be sealed. To do this, use a neutral grease of any type such as Vaseline®, that should fill the entire battery compartment. Replace the cover firmly.

2. If the controller is out of use for a long period of time, it is recommended that the batteries be removed.
3. The batteries should last for about one year (i.e. good quality alkaline batteries).
4. We recommend that new batteries be installed at the beginning of a new season.
5. Before replacing the batteries, the contacts should be cleaned with a dry cloth and sprayed with a protecting spray (e.g. WD-40 or similar).
6. Do not turn on the water supply when the controller is not connected to the hydraulic valve.
7. The recommended water pressure range is 1-8 atmos. (Bars).
8. Additional watering option (semi-automatic):

Every push of the "operating button", after the controller has been programmed, will automatically open the valve for an additional "watering time" (or terminate watering if the "operating button" is pressed during the automatic watering).

In any event, watering will continue thereafter according to the original programming without interruption.

TROUBLESHOOTING. *What to do if....*

PROBLEM	CAUSE	SOLUTION
The valve does not open and no click is heard from the controller, even when programmed for immediate operation (see page 6) or after repeatedly pressing the "operating button".	Manual operation lever is not in the "AUTO" position.	Place the lever in the correct. "AUTO" position in the center.
	The batteries are incorrectly positioned.	Replace batteries correctly ensuring correct polarity (+ -)
	The batteries are dead.	Try again after replacing the batteries with fresh ones.
The valve does not open or close, despite hearing a click when pressing the "operating button".	No water supply	Check the mains water supply valve or look for any other cause.
	The manual operation lever is not in the central "AUTO" position.	Place the lever in the "AUTO" central position.
	Dirt in the valve unit. (You didn't fit a filter as recommended!)	Dismantle the controller from the valve and clean the channel beneath the plunger. N.B. Replace the plunger in the correct direction and make sure that O-ring no.1 is in place. Install a filter!
	The pressure in the system is over 8 atmos. or too low (below 1 atmos.).	Dismantle and clean the valve itself (open the 6 sealing screws that surround the unit). Make sure you re-assemble in the correct direction. Install a filter!
During programming for delay start time, the clicks stop before reaching the required number of hours.	Weak batteries.	Remove the spring from the plunger if the pressure is too high, or increase supply pressure if too low. Replace batteries.

***Should you experience any other problems or if the suggested solution does not help, you should ask your retailer for assistance.**

ADDITIONAL ACCESSORIES AND SPARE PARTS

(May be purchased from authorized Galcon distributors)

1. Protection box (cat. no. K10023)

An externally locked dark green metal box. Protection against vandalism, the elements, and unauthorised reprogramming.



2. Externally lockable frame (cat. no. 2074)

Provides protection by an external screw against easy opening of the cover.



3. Transparent sealing grease pack See instructions on page 9.

4. Water supply filter. 3/4" filter (cat. no. 6310)

Water supply filter. 1" filter (cat. no. 6305)


Protects the watering system against dirt that can cause clogging. Supplied in both 1" and 3/4" diameter sizes.



5. Maintenance parts kit:

(cat No. 13016)

- a. 'O' RING No. 1,
- b. PLUNGER,
- c. BAYONET,
- d. 'O' RING No. 2,
- e. ADJUSTING DEVICE.

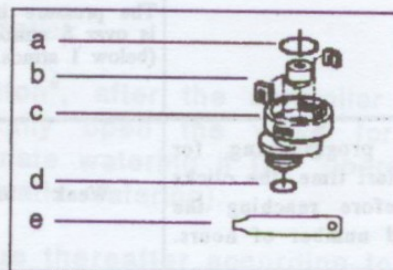


5

GALCON WARRANTY

6. COVER POR E.Z. (cat. No. 4123)

7. 3/4" B.S.P. VALVE & BAYONET ASSEMBLY (cat. No. 5001)

8. 1" B.S.P. VALVE & BAYONET ASSEMBLY (cat. No. 5002)

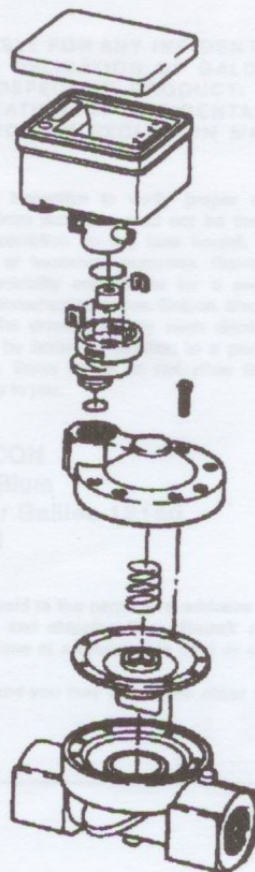

GALCON WARRANTY

GALCON warrants these products to be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty does not cover damage resulting from accident, misuse, neglect, modification, improper installation or subjection to line pressure in excess of 150 lbs. per square inch. This warranty shall extend only to the original purchaser of the product for use by the purchaser. This warranty shall not cover batteries or any malfunction of the product due to battery failure. The obligation of Galcon under this warranty is limited to repairing or replacing at its factory this product, which shall be returned to the factory within one year after the original purchase for use by the purchaser and which on examination is found to contain defects in material and workmanship.

GALCON SHALL IN NO EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND; THE SOLE OBLIGATION OF GALCON, BEING LIMITED TO REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT: SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Unattended use for prolonged periods without inspection to verify proper operation is beyond the intended use of this product, and any damage resulting from such use shall not be the responsibility of Galcon. There are no warranties which extend beyond the description on the face hereof. In the case of purchase of the product for use other than for personal, family or household purposes, Galcon, hereby disclaims any implied warranties, including any warranties of merchantability and fitness for a particular purpose. In the case of the purchase of the product for personal, family or household purposes, Galcon, disclaims any such warranties to the extent permitted by law. To the extent that any such disclaimer or implied warranties shall be ineffectual, then any implied warranties shall be limited in duration to a period of one year from the date of the original purchase for use by the purchaser. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

GALCON
Kfar Blum
Upper Galilee 12150
Israel

Repaired or replaced units will be shipped prepaid to the name and address supplied with the unit returned under warranty. Allow four weeks for repairs and shipping time. Repair of damaged units or units not otherwise within warranty may be refused or done at a reasonable cost or charge at the option of Galcon.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

GALCON WARRANTY

GALCON warrants these products to be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty does not cover damage resulting from misuse, neglect, modification, improper installation or operation or from causes other than those specified herein. The warranty shall be void if the product is not used in accordance with the instructions.

Galcon, under no circumstances, shall be held responsible for any damage or loss resulting from the use of its products. Galcon shall not be held responsible for any damage or loss resulting from the use of its products.

AGENT:

GALCON SHALL IN NO EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND. THE SOLE OBLIGATION OF GALCON BEING LIMITED TO REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Unauthorized use for purposes other than those specified in the instructions is prohibited. Galcon shall not be held responsible for any damage or loss resulting from the use of its products. Galcon shall not be held responsible for any damage or loss resulting from the use of its products.

GALCON
Kfar Blum

Upper Galilee 12150
Israel

Prohibited or restricted usage will be deemed to be a breach of the warranty. Galcon shall not be held responsible for any damage or loss resulting from the use of its products. Galcon shall not be held responsible for any damage or loss resulting from the use of its products.



IRRIGATION CONTROL EQUIPMENT

Kfar Blum 12150 Israel • Tel. 972-6-948514 • Fax. 972-6-948777

Printed in ISRAEL 195